

Operating & Maintenance Instructions

MASTER CONTROL UNIT

REF: MCU - 2 Volt Free Version

User Instructions:

Resetting The Unit

Following a fire alarm signal this unit must be reset before the equipment controlled by it can be used.

This reset can only be carried out **when approval is given by the sites responsible person as appointed under the fire safety reform order**

To reset the unit ensure that the green and amber lights only are lit, press the green pushbutton on the unit.

The unit will not reset if a fire input signal is still present.

If you believe the unit is faulty check the LED status given below to assist you.

System LED Status	GREEN	RED	AMBER
System Normal	ON	OFF	OFF
Fire Input Signal Active	ON	ON	ON
System Requires Reset	ON	OFF	ON
Power Failure	OFF	OFF	OFF
Internal Warning Buzzer Sounding Continuous	System Isolated For Testing		

Fire Alarm Testing / Isolating The Unit

If the system is isolated for multiple fire alarm detector testing it **MUST** be reset on final completion of any testing.

It is strongly recommended that the unit is set to system active before the final fire alarm detector test is completed and that correct operation is then verified at that time. We recommend that this unit is tested fully every 6 months in accordance with BS5839

Servicing:

The unit should only be serviced by a competent person. Approved Spare Parts are available from the supplier.



SUPPLIED BY:

Fire-Plant-Shutdown.co.uk
The Rear Building,
Anglesey House,
Anglesey Road,
Burton on Trent,
Staffs,
DE14 3NT.

Telephone: 07880797355 Sales & Technical
www.fire-plant-shutdown.co.uk

Specifications are subject to change without notice.
Doc Ref: _PDF_datasheet_IPSCS_MCU_2_11_ User