

# Operating & Maintenance Instructions

## PLANT CONTROL RELAY

REF: PCR - 1

### User Instructions:

#### Resetting The Unit

Following a fire alarm signal this unit must be reset before the equipment controlled by it can be used.

This reset must only be carried out:

**When approval is given by the sites responsible person as appointed under the fire safety reform order**

To reset the unit ensure that the green and amber lights only are lit, press the green pushbutton on the unit.

The unit will not reset if a fire input signal is still present which is signaled by the red LED; or if the power supply has failed.

If you believe the unit is faulty check the LED status given below to assist you.

System LED Status	GREEN	RED	AMBER
System Normal - Power On	ON	OFF	OFF
Fire Alarm Input Signal Active	ON	ON	ON
System Requires Reset - Push Green Reset Button	ON	OFF	ON
Power Failure Push Green Reset Button when power is restored	OFF	OFF	OFF

#### Servicing:

The unit should only be serviced by a competent person. Approved Spare Parts are available from the supplier.



#### SUPPLIED BY:

Fire-Plant-Shutdown.co.uk  
The Rear Building,  
Anglesey House,  
Anglesey Road,  
Burton on Trent,  
Staffs,  
DE14 3NT.

Telephone: 07880797355 Sales & Technical  
[www.fire-plant-shutdown.co.uk](http://www.fire-plant-shutdown.co.uk)

Specifications are subject to change without notice.  
Doc Ref: \_PDF\_datasheet\_PCR-1\_-4-11-User